

# DK012-DK490 Holder Installation

**Clean surface with supplied alcohol pad and let dry completely (15-30 minutes) Allow surface to dry fully! Do not use household cleaners. Wipe any residue with clean dry cloth.**

**Step 1:** Loosely attach adapter plate to chrome holder using the two supplied screws

**Step 2:** Mark desired wall placement and carefully peel protective foam ring cover. Be sure to note the correct orientation of the holder prior to attaching. You cannot remove the adapter once the ring has made contact with the wall without damaging the adapter ring.


**Step 3:** Press firmly in place. Remove screws. Adapter is now aligned and ready for step the adhesive

**Step 4:** Pierce adhesive tube with pointed end of red key. Slide tube end into the slot in red key and roll up carefully. Be sure not to advance glue out of tube

**Step 5:** Insert tube end into one of the large holes on the adapter and slowly turn the key. Continue until the adhesive exits the opposite hole in the adapter and then remove the tube. Do not touch the adapter at this point. You can remove excess glue after curing

**Step 6:** Wait 12 hours, remember to not disturb the adapter as this will weaken the bond.

**Step 7:** Re-attach the holder to the base adapter using the two supplied screws until firm. **Do not over tighten!!**

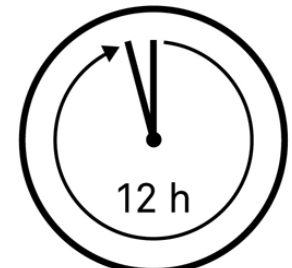

no drilling required.

