


# Assist Bar Installation

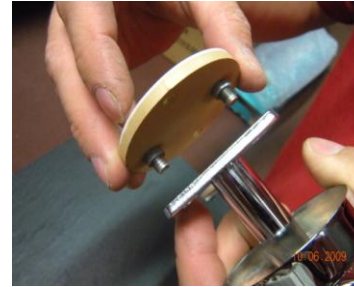

1. Use level and mark location for bar placement.

2. Use supplied cloth to clean surface, allow 1 hour to dry completely. Do not use household cleaners. Wipe with clean dry cloth after dry

3. Loosely attach adapter to base

4. Carefully remove protective ring cover



5. Caution: Once adapter makes contact with surface, it cannot be removed without damaging ring. Be sure you have clearly marked location before attaching to surface. Firmly press adapters on to surface. Remove bar.

6. Pierce end of tube with end of red roller stick. Slide slotted red stick over tube end and engage folded end of tube. Insert tube into **one hole only** and slowly roll tube, inserting adhesive into adapter. When adhesive pushes up through the second hole, remove and **let stand undisturbed for 24 hours**. **Clean excess adhesive when dry.**



7. Mount bar using wrench and nuts included.

8. For recommended placement, troubleshooting tips and/ or replacement adapters:

[www.nodrillingrequired.com](http://www.nodrillingrequired.com)